



Systémové předpoklady: Internet Explorer s nainstalovaným doplňkem Web Components (instaluje se po přihlášení k webovému rozhraní NVR)

1. Přihlášení do webového rozhraní NVR (Network Video Recorder). IP adresu, uživatelské jméno a heslo Vám sdělí instalační technik. Doplňek Web Components v současné době funguje pouze v prohlížeči Internet Explorer. Pro pořizování snímků a zapisování na pevný disk počítače, je nutné, aby byl internetový prohlížeč spuštěn s nejvyššími oprávněními tj. „spustit jako správce“. Pokud se bude pouze zobrazovat živé video, stačí spustit internetový prohlížeč běžným způsobem.

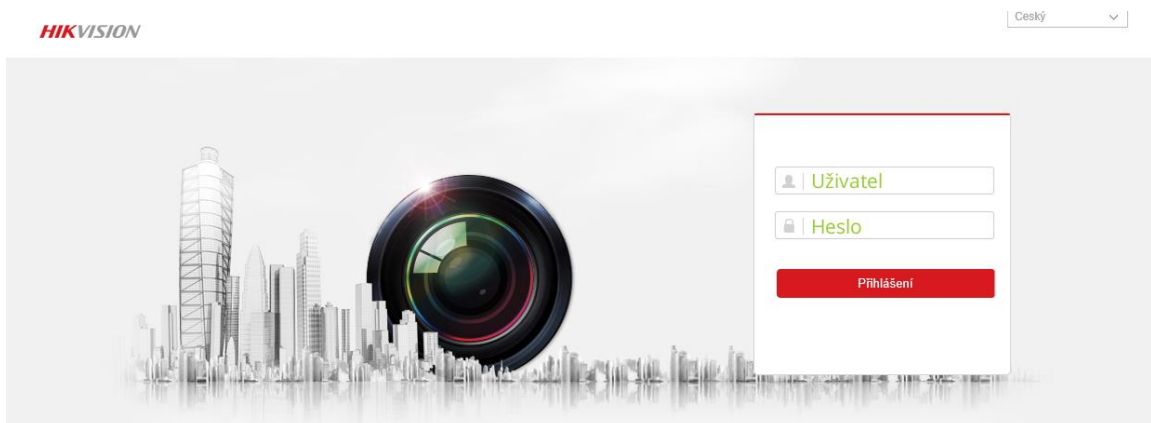

2. Při prvním spuštění je vhodné nastavit v místní konfiguraci „Automatické spuštění živého zobrazení“:

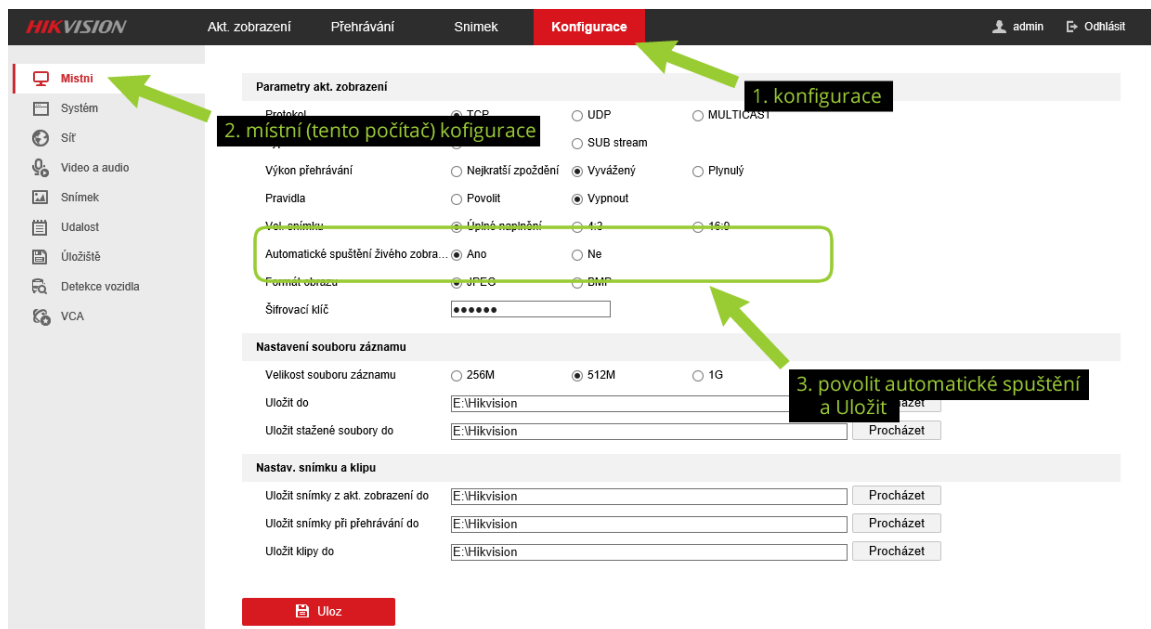

3. Zobrazení živého videa

The screenshot displays the Hikvision web interface for live video monitoring. At the top, there is a navigation bar with the Hikvision logo and menu items: "Akt. zobrazení" (highlighted in red), "Přehrávání", "Snímek", and "Konfigurace". On the right side of the navigation bar, there is a user profile icon labeled "admin" and a "Odhlásit" button.

On the left side, there is a list of camera channels with icons and labels: K1 Zahradka, K4 Vytah, K3 Vchod, K2, K7 Restaurace, K8 Snidarna, and K9 Zahradka 2. Each channel has a small camera icon and a lock icon.

The main area shows a 3x3 grid of video feeds. The top-left feed is highlighted with a green arrow and a text box that says "1. aktuální zobrazení". The bottom-left feed is also highlighted with a green arrow and a text box that says "2. změna rozložení a počtu kamer". The bottom-right cell in the grid is currently black, indicating a change in layout or camera count.

On the right side, there are PTZ (Pan, Tilt, Zoom) controls. These include directional arrows, a search icon, a refresh icon, a zoom slider, and a list of presets from Preset1 to Preset15. The "Preset1" is currently selected.

At the bottom of the interface, there is a toolbar with various icons for camera control, including a grid icon, a camera icon, a microphone icon, a speaker icon, a zoom icon, a pan icon, a tilt icon, and a refresh icon.